

Connecting indicator lamps to module "Lights Sender" in cars from the USA



In lighting installations in cars from USA (two separate brake lights - change in indicator lamp, while signaling a change of direction of road), to control inputs **1 / L** and **4 / R** in module LS1, it's necessary to use the front lights of indicator lamps. To control input of brake light (**54-STOP**) in the module LS1, you should separate the left and right **STOP** light on car, or use additional third light brake light of car, **54-STOP**) as shown in the image below.

